




NISSAN PATROL Y62

## INSTALLING RAILS AND ROOF RACK:


**Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.**

**Please follow these instructions to ensure correct fitment.**

1. Remove the 6 Mounts from the vehicles roof.
2. Remove mounting closures in roof channel strip 3 per side.
3. Place the lugs into the mounting positions.
4. Use the M8 Socket head screws to fasten lugs into mounts, use silicone or urethane sealant on threads to prevent water ingress.

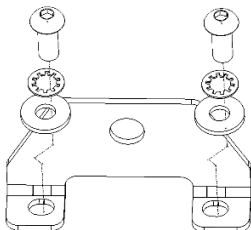


5. Attach Rails to lugs using 10mm hardware with the wedgetail logo facing to the front of the vehicle. Refer to the pictures provided here. Do not fully tighten.

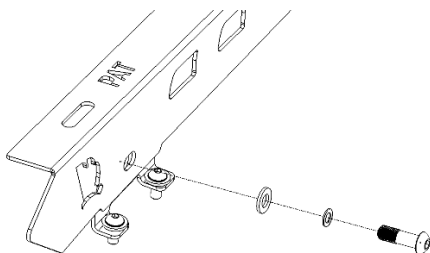


6. Fit 10mm Bolt / Flat washer/ Split washer / Strut Nuts to the top of rail.

*\*strut nuts to the top as shown*

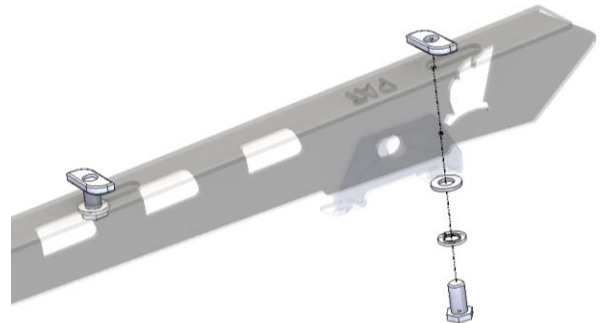

7. Place the Wedgetail Platform on the rail, push all the channel nuts up and rotate them to lock.

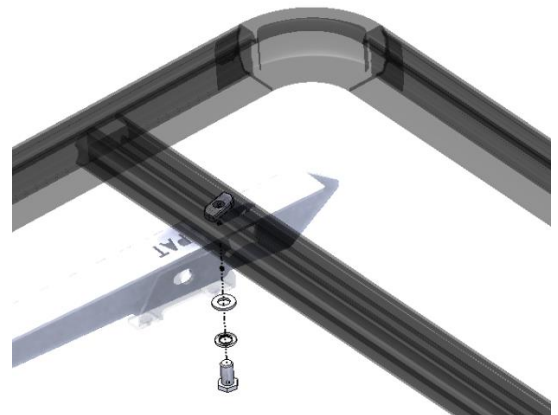

8. Centralize the platform evenly on the wedgetail rails.
9. Fully tighten remaining bolts in the following order:
  - a) Rail to the Lug
  - b) Rails to Platform

\* ensure to push strut nut up and turn 90 degrees in platform crossbar channel to secure

  - c) Install Wind Deflector using 8mm hardware.

**Check fastenings are firmly tensioned at regular intervals.**

**Do not overtighten to preserve spring washers.**

**Thank you for your purchase**



**Please complete your warranty application following  
correct installation**

**Wedgetail by Tradesman Roof Racks**

***Innovation through Inspiration***