




WTM-THL19-3015

INSTALLING RAILS AND ROOF RACK:

Congratulations on the purchase of your quality Australian made Wedgetail Roof Rack product, please follow these instructions to ensure a safe and correct fitment.

1. Remove the factory roof lugs by removing bolts using 10mm socket.

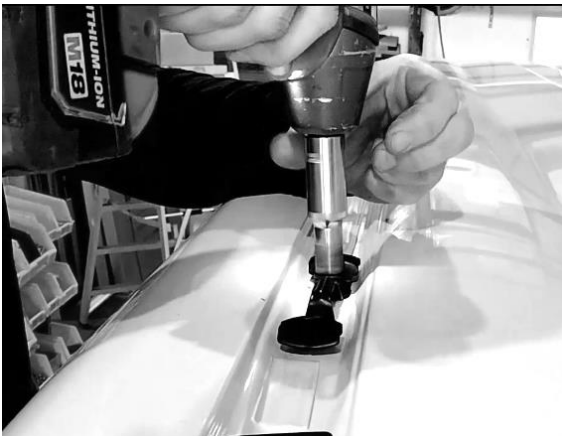

2. Apply the silicon sealant for each bolt.




3. Supplied rails are in two pieces, F and R (Front and rear respectively). Mount each rail on the roof using 8mm bolts & washers.



4. Fit 10mm Bolts / Split washers/ Flat washers with the channel Nuts on top of rail.

**Channel nuts to the top as shown in the next diagram*

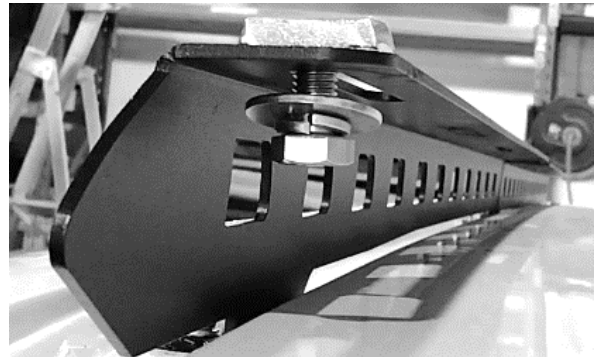

5. Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.



Toyota Hiace LWB 2019 Wedgetail Fitting Instructions



6. Centralize the rack side to side (using a tape measure) to outside of platform.
7. Fully tighten remaining bolts in the following order:
 - a) Rails to Platform
 - * Ensure the channel nuts are 90 degrees to the channels in the platform
 - b) Install wind deflector using 8mm hardware

Note: Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

Thank you for your purchase.

Please complete your warranty application following correct installation

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration