



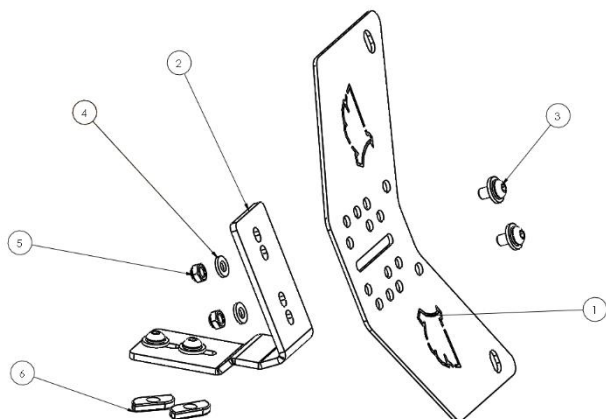

**WTA-TBSW**


**Accessory – Recovery Side Wing Tracks Bracket**

**Congratulations on the purchase of your Australian made Wedgetail Roof Rack accessory.**

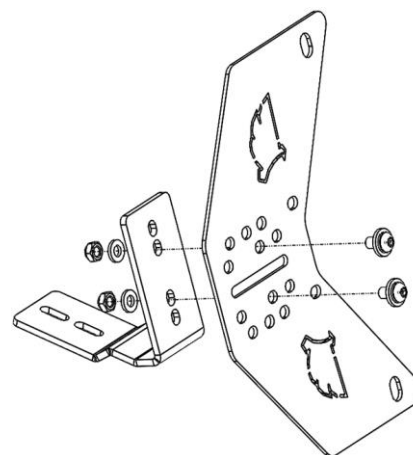

2. Assemble the bracket on the crossbar using M8 Bolt, washer, and channel nuts.

ITEM NO.	PART NAME	QTY
1.	Trax Plate	2
2.	Angle Bracket	2
3.	M8 X 20 Bolt and washer	8
4.	M8 Flat Washer	4
5.	M8 Nyloc Nut	4
6.	M8 Channel Nut	4

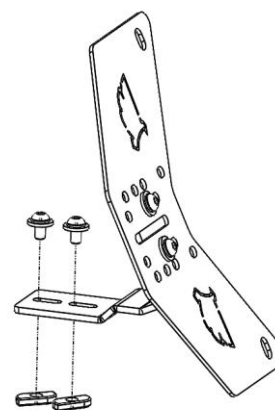


3. Keep a gap of 3 crossbars and then put the 2<sup>nd</sup> Trax plate on the 4<sup>th</sup> crossbar.

**Please follow these instructions to ensure correct fitment.**

1. Assemble the Trax plate in the top of the angle bracket using the M8 Bolt, washer and nuts. Refer to the diagram.

**Refer to the diagram below to identify the slot to be used for your rack.**

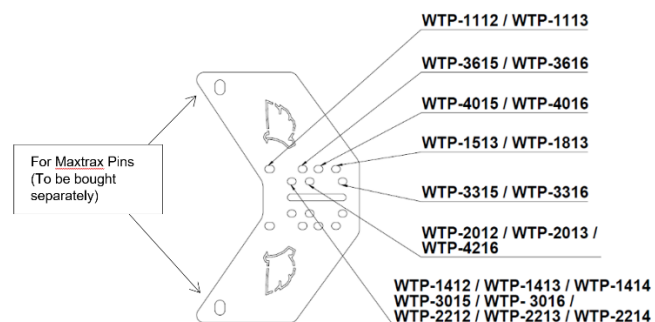



***Maxtrax Locking Pins needs to be  
purchased separately.***

**Thank you for your purchase**  
**Wedgetail by Tradesman Roof Racks**  
***Innovation through Inspiration***