




Volkswagen Amarok Wedgetail Fitting

INSTALLING RAILS AND ROOF RACK:


Congratulations on the purchase of your Australia made Wedgetail Roof Rack product, please follow these instructions to ensure correct fitment.

Mounting Lug Installation


1. Remove the rubber mould or pockets in the roof channel to expose specific mount points
2. Attach lugs to the roof of vehicle using 6mm hardware. Do not tighten fully.

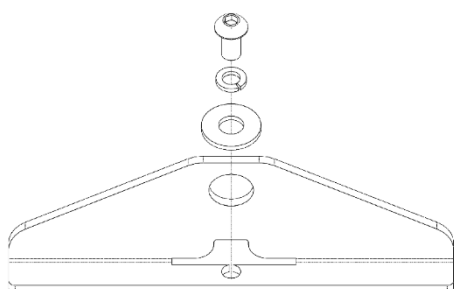

3. Attach Rails to lugs using 10mm hardware with the wedgetail logo facing to the front of the vehicle. Refer to the diagram.

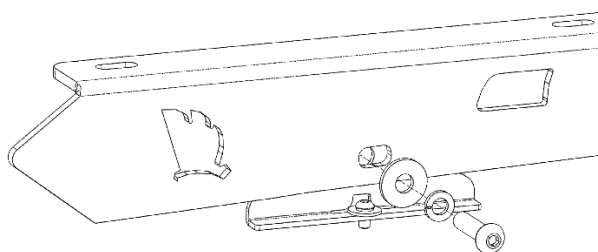

4. Fit 10mm Bolt / Flat washer / Split washer / Strut Nuts to the top of rail.
**strut nuts to the top as shown in the next diagram*

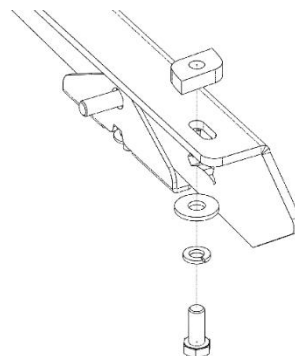

5. Place the Wedgetail Platform on the rail. Do not tighten fully. (Wind deflector mounting towards the front of vehicle)
6. Centralize the rack side to side on the wedgetail rails.
7. Fully tighten remaining bolts in the following order:
 - i) Rail to the Lug
 - ii) Rails to Platform
*** ensure to push strut nut up and turn 90 degrees in platform crossbar channel to secure**
 - iii) Attach wind deflector

**Check fastenings are firmly tensioned at regular intervals
Do not overtighten so as to preserve spring washers.**

Thank you for your purchase

Please complete your warranty application following correct installation

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration